









# Installation

## Steel trunking 110, 120, 130, 170


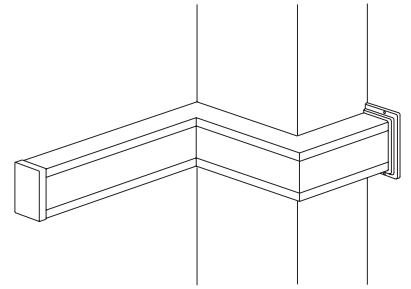


110:	120:	130:	170:
STA550004	INS5551000	STA550036	INS5553003
INS5550003	STA550023	INS5552003	STA550121
STA550071	INS5551003	STA550103	INS5553013
STA550013	INS5551002		STA550131
INS5550013	STA550090		STA550055
STA550080			INS5553023
			STA550145

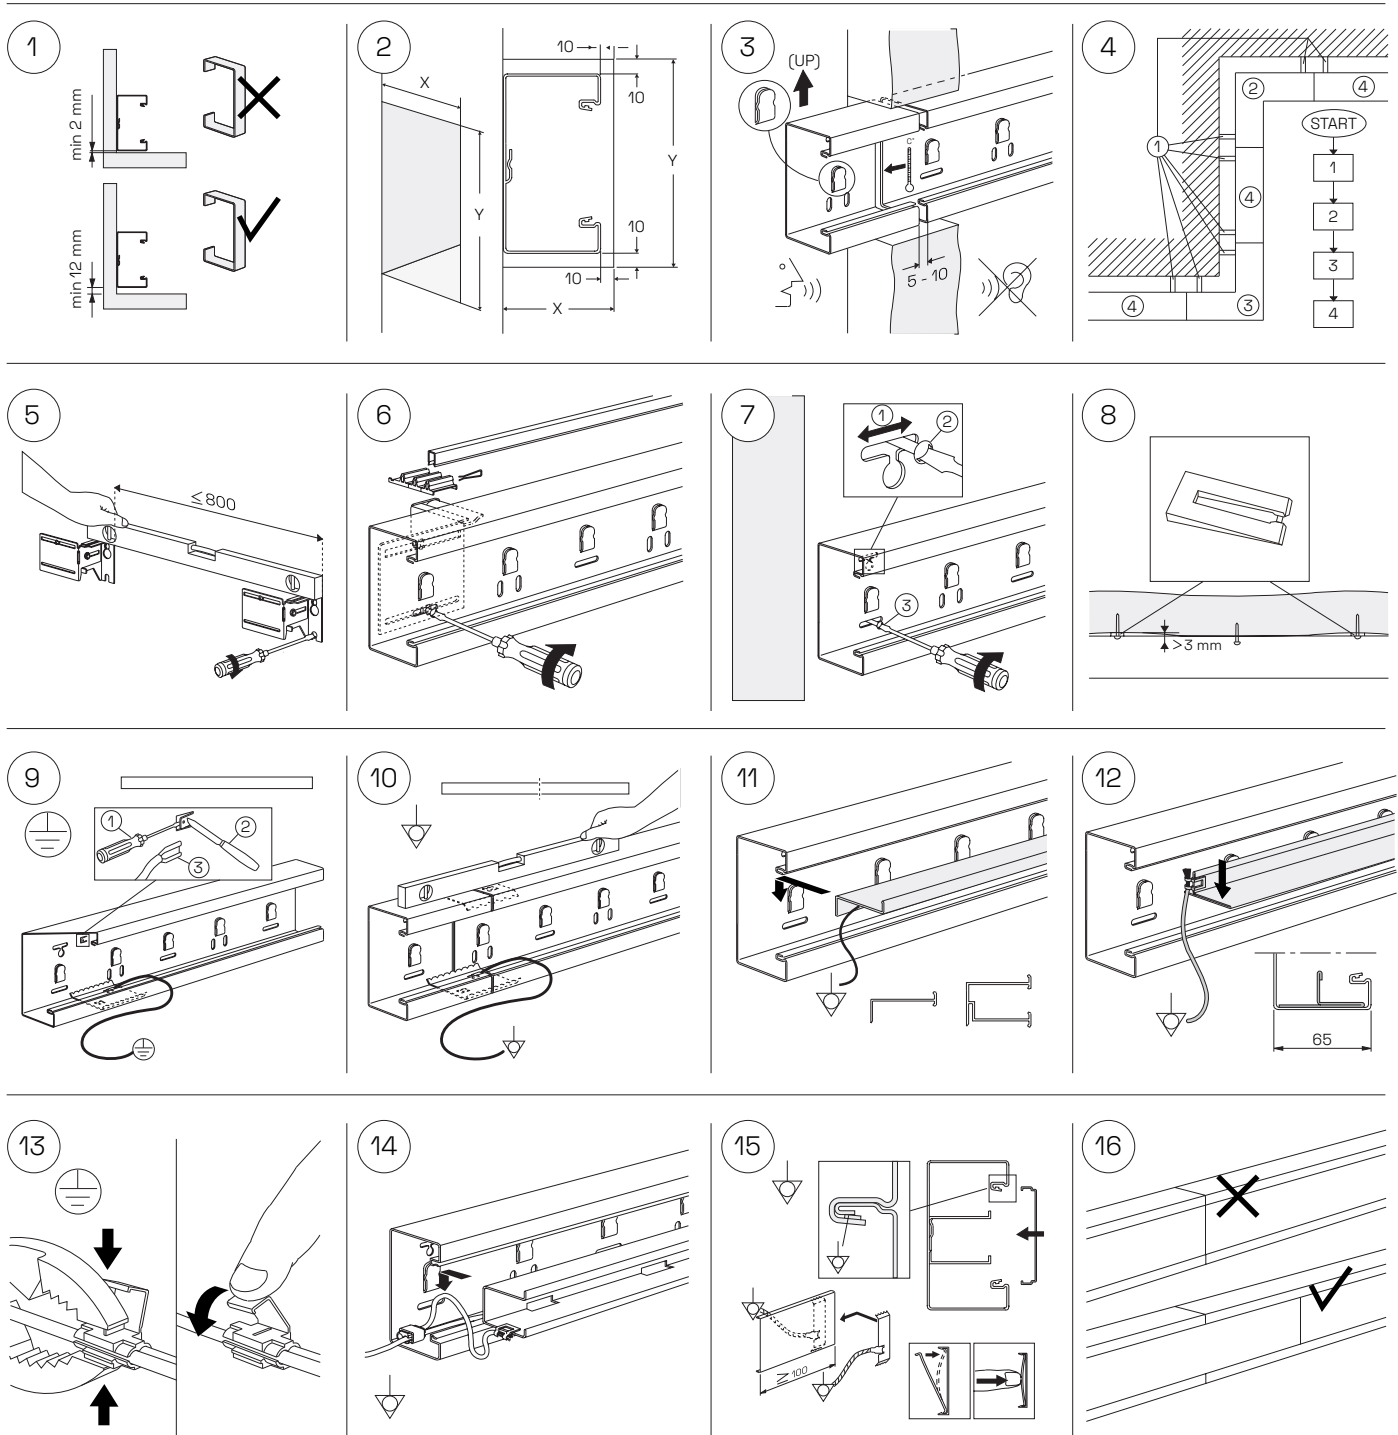

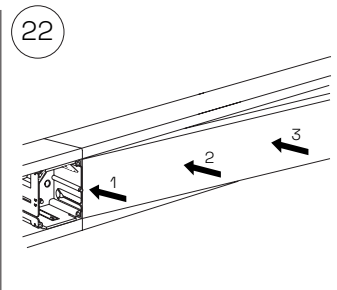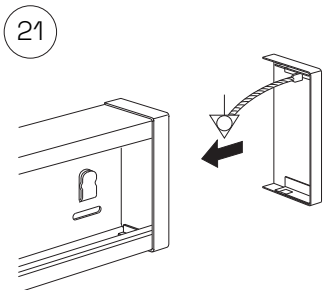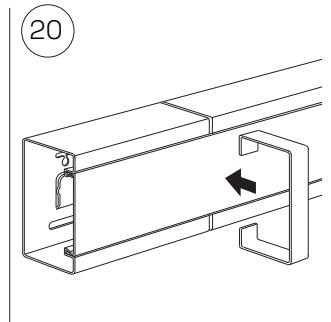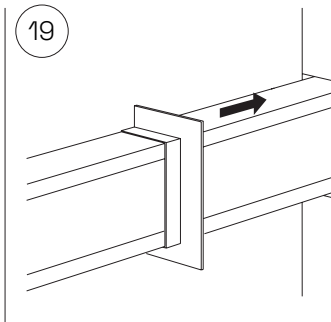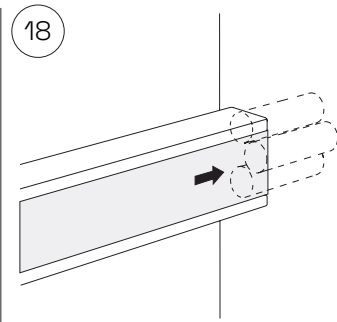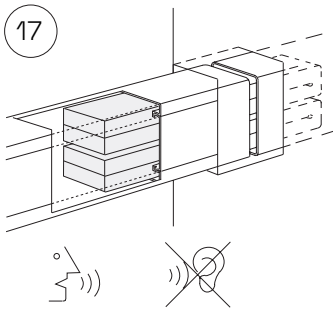



## Dismounting

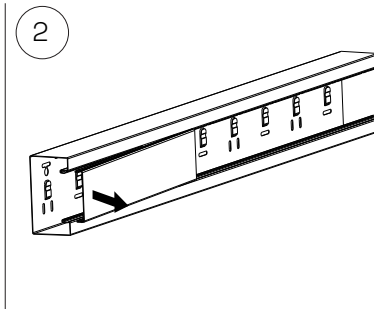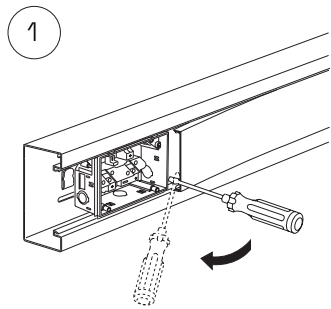

# Installation

## Steel trunking 165V



STA550045  
INS5554003  
STA550112



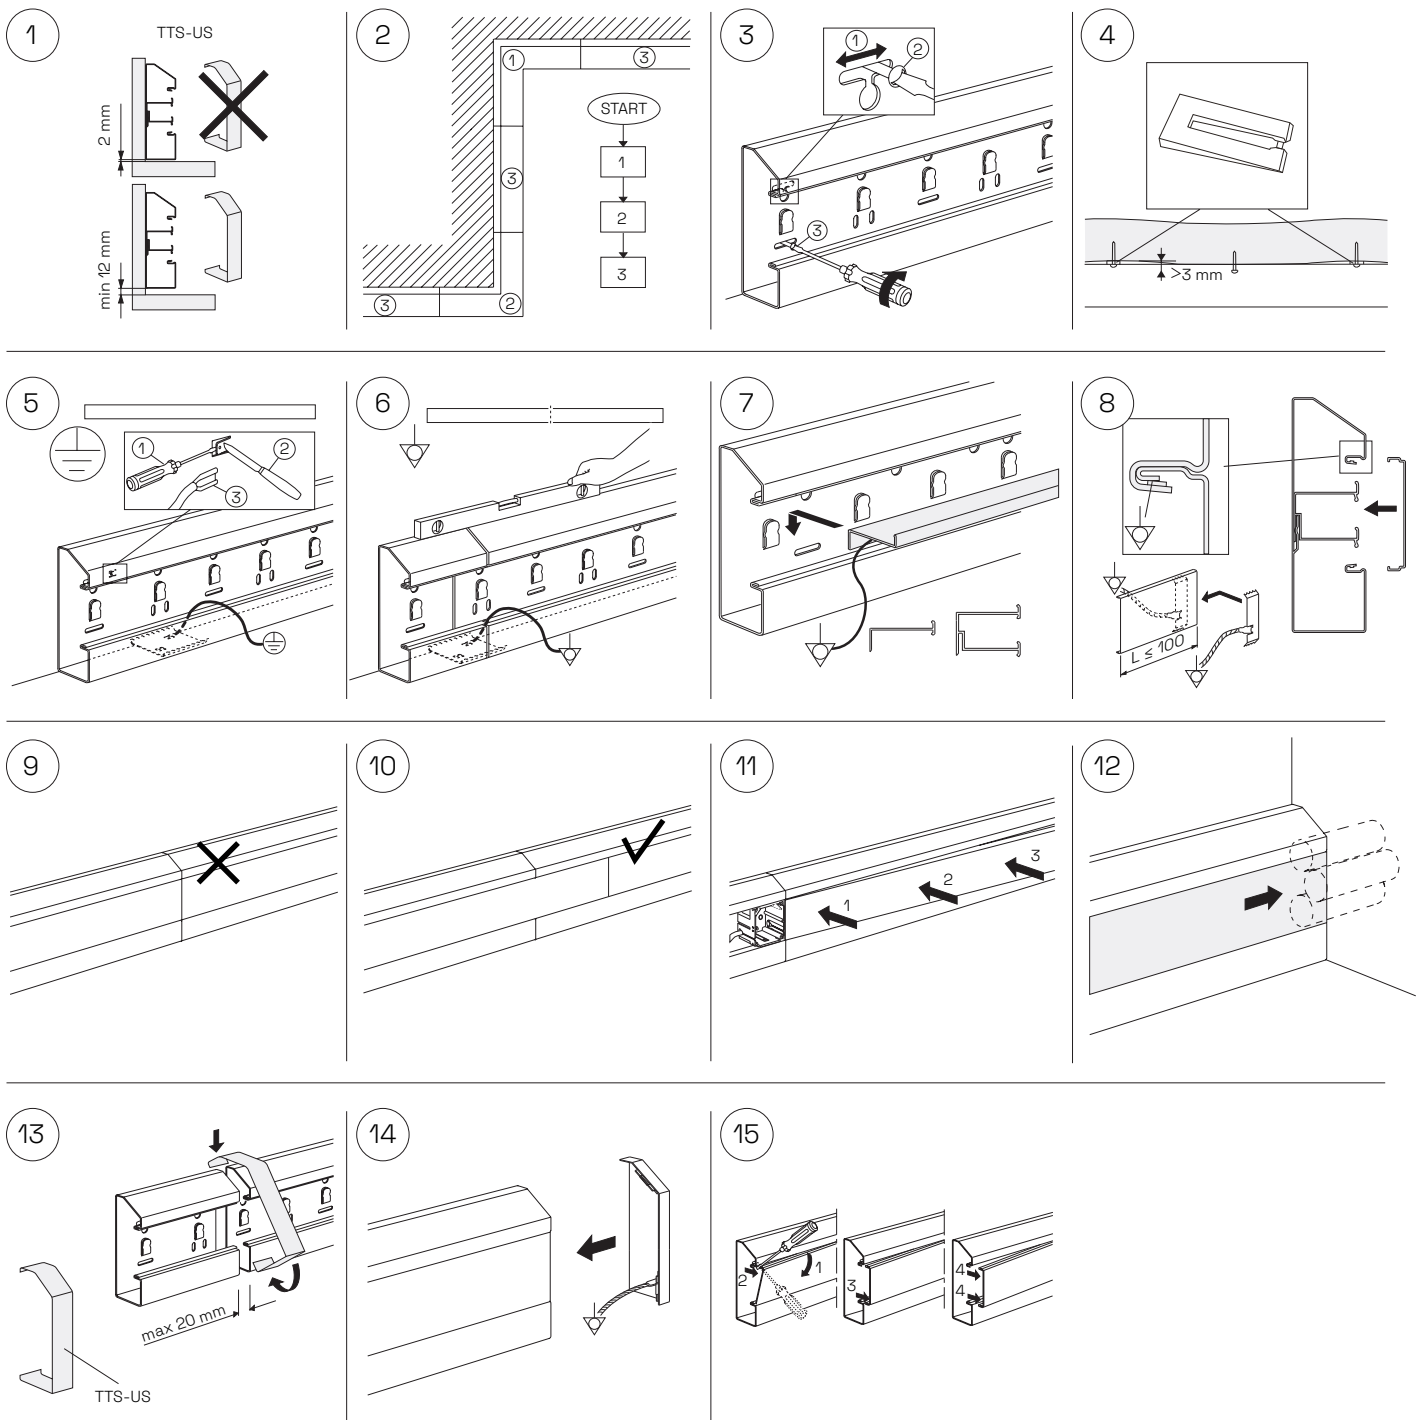
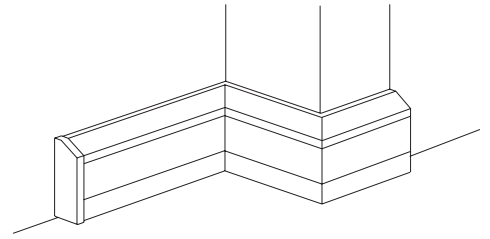


# Installation

## Steel trunking 183-2, 233-2

INS5555003  
INS5558003

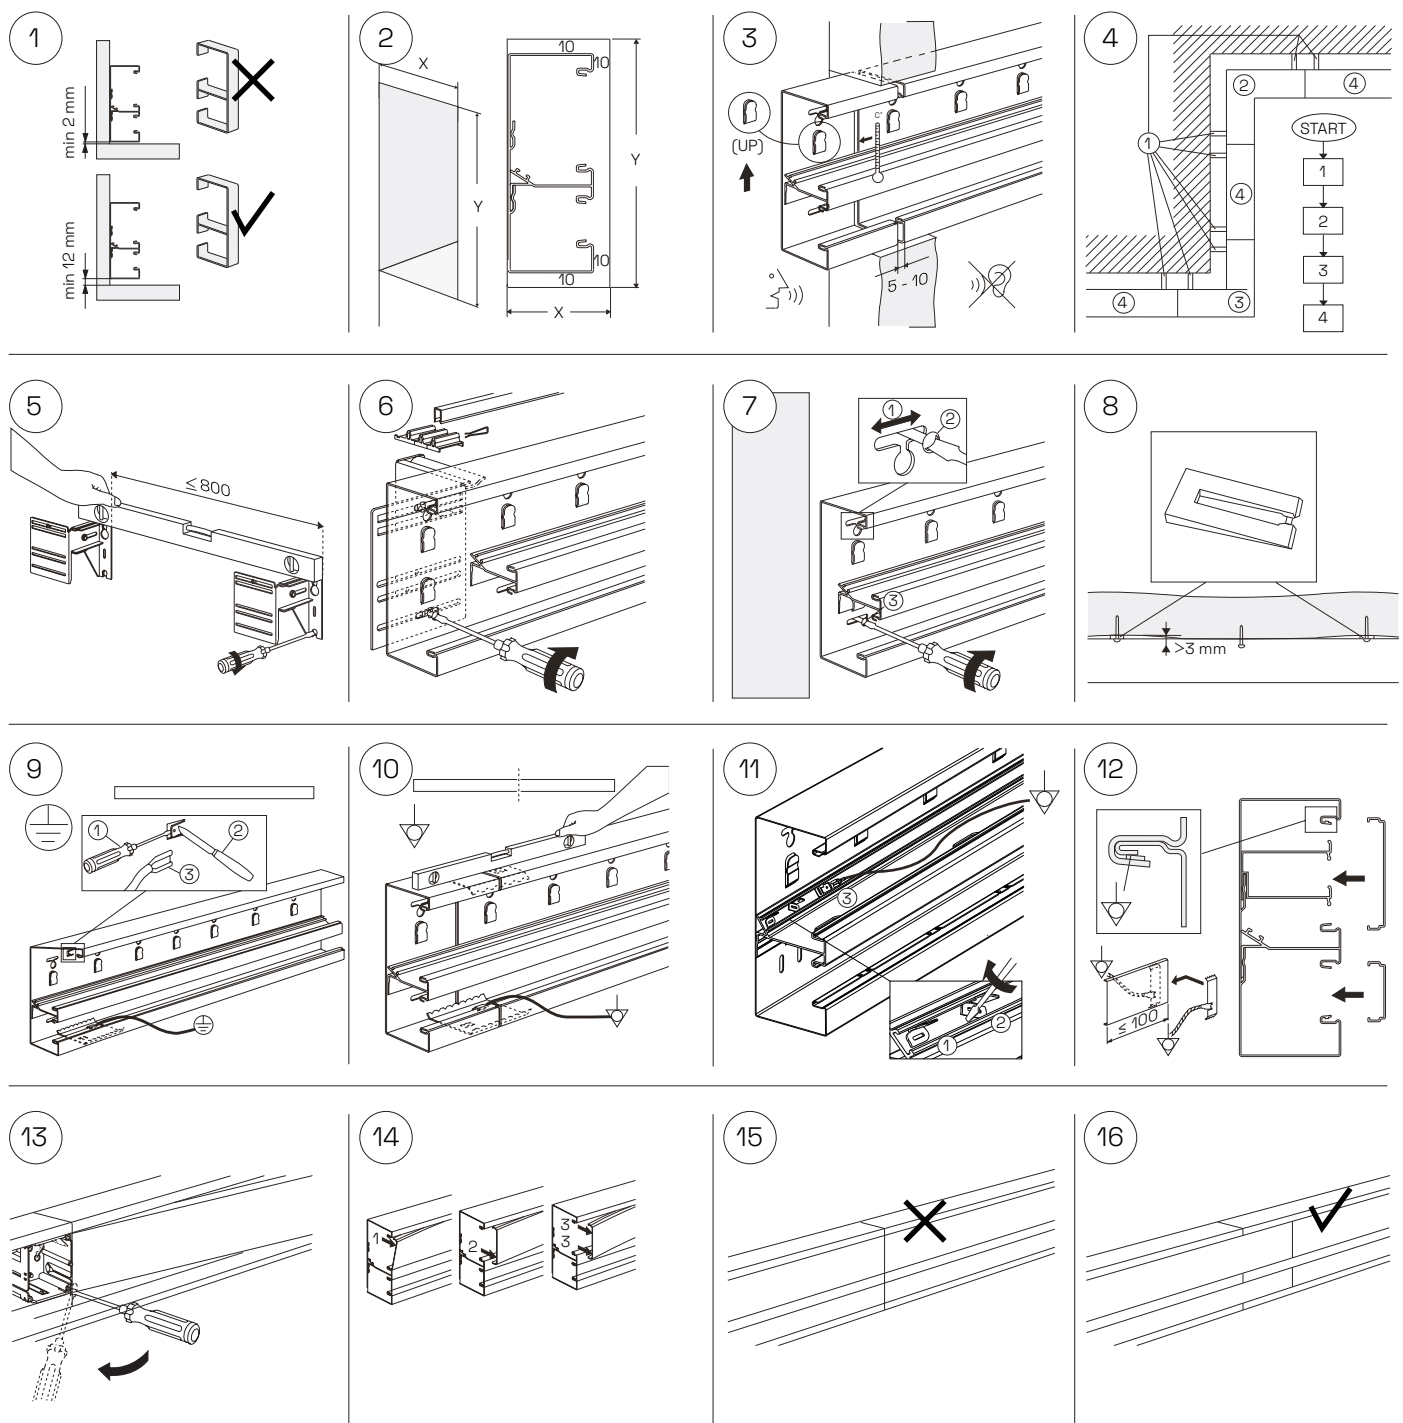
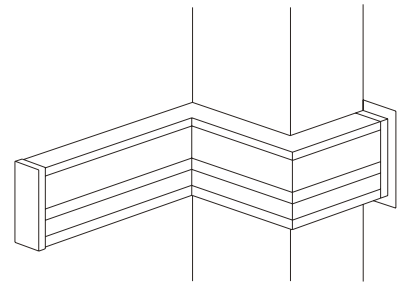


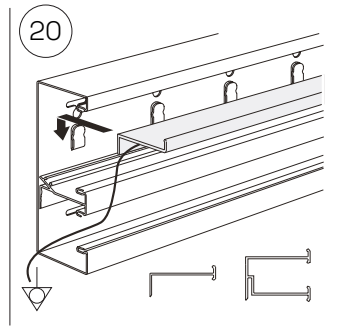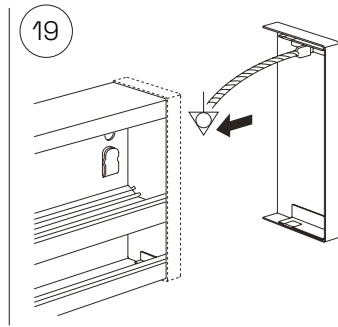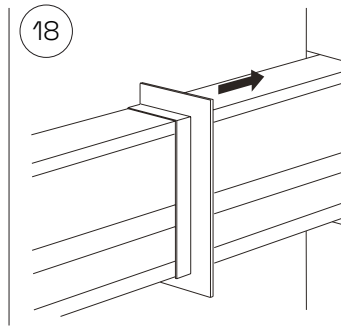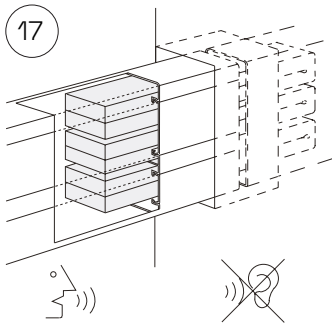



# Installation

## Universal corners



110:	120:	130:	170:
STA550001	STA550174	STA550031	INS5553109
INS5550103	INS5551105	INS5552123	STA550118
STA550068	STA550020	STA550098	INS5553102
STA550010	INS5551101		STA550138
INS5550123	INS5551104		STA550051
STA550077	STA550087		INS5553123
			STA550141

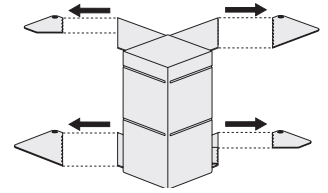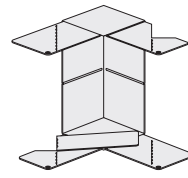

### Installation of internal corner

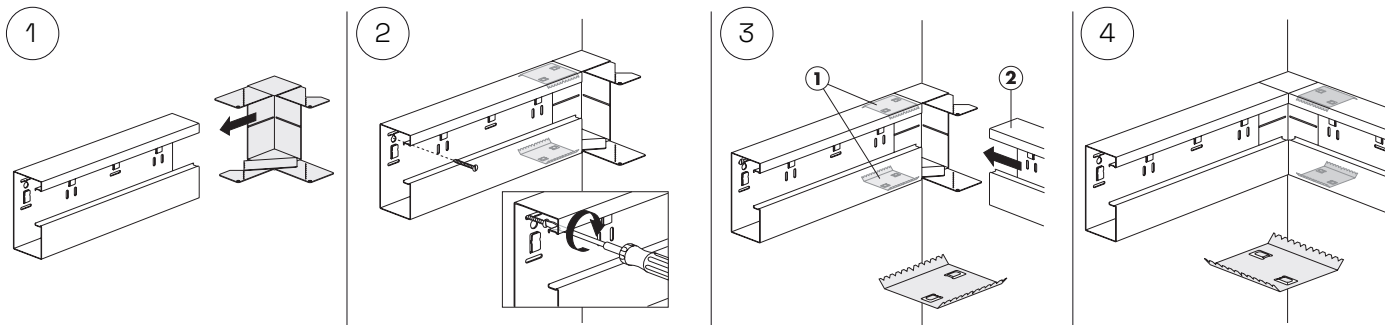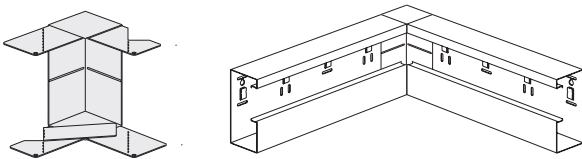

### Installation of external corner

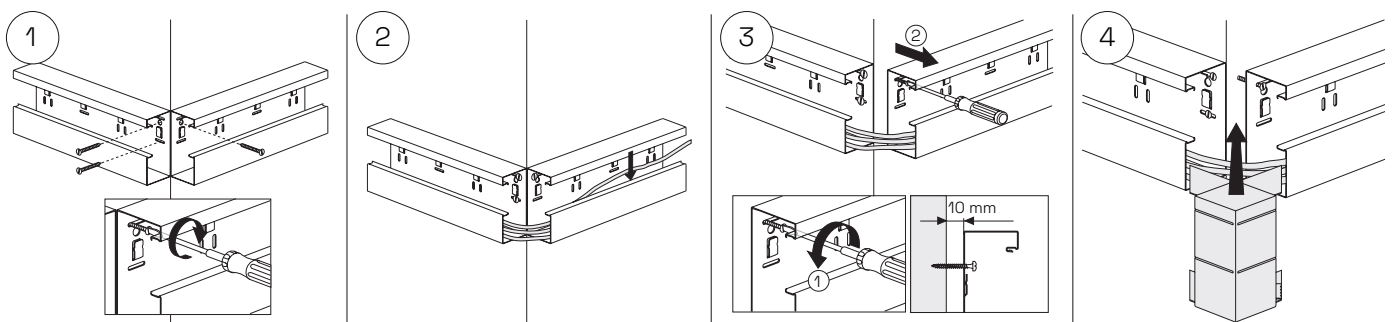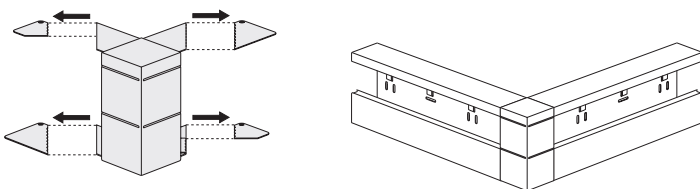

# Installation

## Universal T-piece

120:	170:
STA550172	STA550062
STA550019	INS38051774
INS38050074	STA550151
STA550086	

